

Rear seat


Seat cushion

To remove

- 1 Remove the four bolts in the metal strip along the leading edge of the cushion. Lift the cushion out of the car.

To fit

- 1 Put back the seat cushion and tighten the four bolts in the leading edge of the cushion.

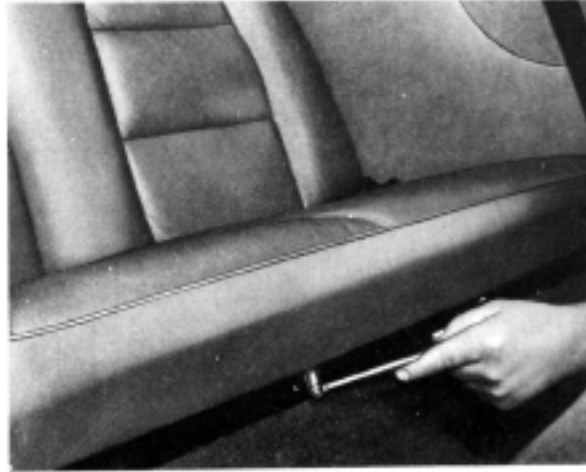


Backrest

To remove

- 1 Remove the seat cushion (see above).
- 2 Remove the two bolts securing the bottom of the backrest.



Remove the two bolts securing the top of the backrest and lift the backrest out of the car.

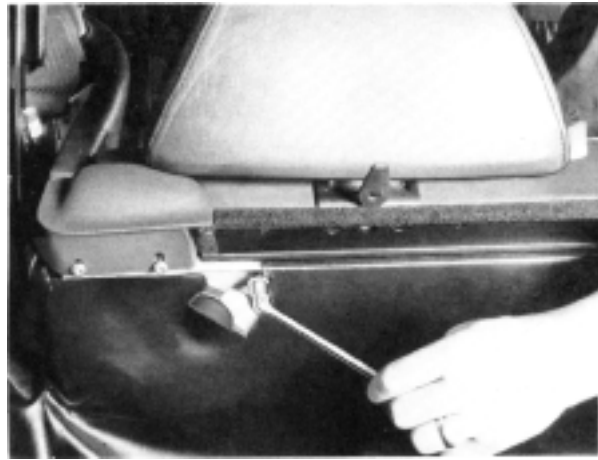

fit

Lift the backrest into position and tighten the securing bolts at the bottom of the backrest.



Tighten the securing bolts at the top of the backrest.

Refit the seat cushion

