



# TECHNICAL ADVICE

A quick information for your help

T/A GB-08-020 (File in Technical News)	Date: Jul 2008
----------------------------------------	----------------

## SYMPTOM DESCRIPTION

Parking light does not work

- This symptom may occur both with engine running or switched off.
- One or both lights may be affected
- This failure may be intermittent and the parking lights might work at time of testing.
- The rear parking lights are NOT affected by this issue.

## ACTION

Install a resistor to the parking light  
Do NOT replace the headlight

### Parts required

- 12784978 - wire and contact house
- 12784973 - resistor and contact house

Note!

Both part numbers are needed for each headlamp but only repair the affected light

some conditions under the limit from what the G detects as an open/short	...
Sign: circuit thus the G will dictate the output until the next time the engine is started	

## REPAIR PROCEDURE

1. Remove the headlamp assembly from the car
2. Install the resistor/wire to the contact house for headlamp  
See the wiring diagram on following page

**Note! Place the resistor/wire so it does not foul any moving part or can get trapped !**

3. Install the headlamp

