


# Soft Boot/Tonneau Cover - Kit


*Saab 900 Convertible Tonneau Cover Fitting Kit - Instructions*

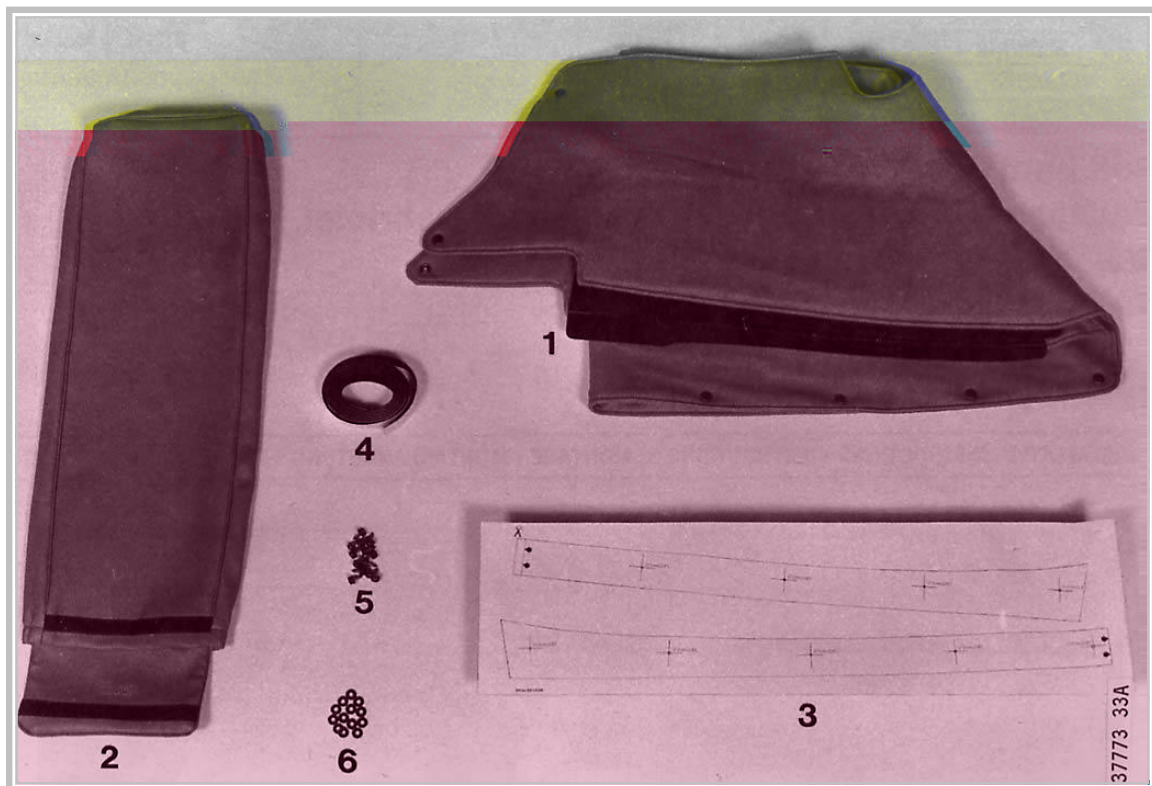

## Fitting Kit Contents

1. Soft boot cover
2. Storage bag
3. Template
4. Velcro strip
5. Press-stud fasteners, (13 of)
6. Seal, (13 of)

## Fitting Kit Application Instructions

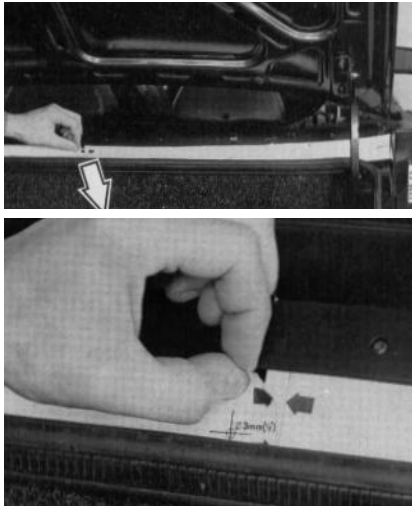

**Figure 1**

- Cut out the template.
- Open the luggage compartment lid, and fit the two parts to the body above the sealing strip on the top edge of the luggage compartment, so that they overlap as shown in Figure 1.
- The upper edge of the drilling template must butt up against the covering strip of the convertible top.
- Tape the template in position.

- Mark out the nine holes indicated on the template, using a centre punch.



**Figure 2**

- Remove the template and drill the 3 mm (1/8") holes as marked.
- Protect the rubber strip with paper or something similar.
- Apply corrosion protection to the drilled holes.
- Screw the push-button brackets and the seals into the drilled holes



**Figure 5**


- Clean the top edge of the support rail behind the backrest cushion. Use a solvent such as benzine and wipe dry with a rag.

- Cut a piece of Velcro strip from the roll. 1000 mm (39") for -M87, and 860 mm (34") for M88-.
- Remove a little of the protective backing film, and attach the Velcro strip to the edge of the support rail, as shown in the Figure.
- The Velcro strip should be attached at room temperature.



- Remove the protective backing film from the Velcro strip, and attach the strip along the entire upper edge of the support rail.
  - Fold down the Velcro strip over the longitudinal edge of the support rail, and press with the fingers against the strip so that it adheres well.
- 
- Attach the soft boot cover at its rear edge with the press-studs, and bring together the Velcro strips on the soft boot cover and the supporting rail.
  - Pull the sides of the soft boot cover forwards and over the sides of the cover over the safety belt. Pull sufficiently for the soft boot cover to make contact with the cover along the whole of its edge.



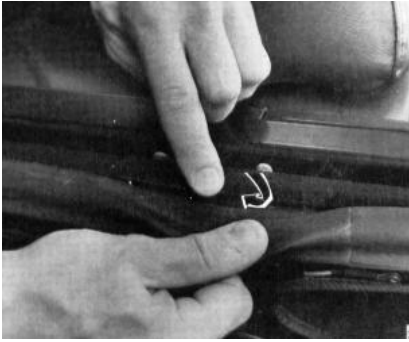

**Figure 13**

- Press with the fingers against the Velcro strips so that they adhere well.
- 
- Cut two 80 mm (3") lengths of Velcro strip from the roll.
- 
- Clean the rear/upper part of the side trim, close to the sides of the backrest cushion. Use a solvent, and wipe dry with a rag.
  - Remove the protective backing film from the Velcro strips, and attach them as shown in the Figure.
  - Press with the fingers against the Velcro strips so that they adhere well.
- 
- Install the soft boot cover, and check that it fits correctly and that the Velcro strips adhere at all points. Place the operating instructions in the car.